

AFR - AFP - SCREW HOLDER SCREWDRIVERS




Description :

- For slotted and Phillips® head.
- Screw holder and screwing with the same tool.
- The guide is moved with the thumb, the spring holds the screw on the blade.



References :

	A [MM]	E [MM]	L [MM]	L1 [MM]	PHILLIPS [NO]	[G]
AFR.3X100	3	0,5	190	100	-	37
AFR.4X125	4	0,6	225	125	-	65
AFR.5X150	5	0,7	260	150	-	95
AFP.2	-	-	285	175	PH2	120
AFP.1	-	-	260	150	PH1	100