


77A.PL - HV CROSS BRACES

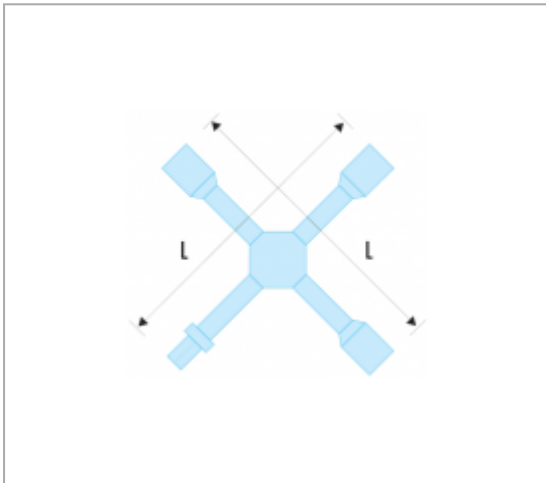


Description :

- Braces used to remove nuts from wheels of light, utility and heavy vehicles.
- When the brace has a drive bit, it is interchangeable.



References :

	D [MM]	L [MM]	SQUARE ["]	[KG]
77A.PL1	24 - 27 - 30 - 32	700	-	4.7
77A.PL2	24 - 27 - 33	700	3/4	4.6