

AXIAL BALL JOINT EXTRACTOR



Description :

BALL JOINT SEPARATOR .

Used to disassemble and assemble steering ball joints.


This functional and compact inner tie rod removal tool set makes easy to replace all type of inner tie rods of cars as well as light commercial vehicles.

Thanks of the 3 models of adaptable cages this tool covers the largest range of different shapes and size of tie rods heads from a diameter of 28mm to 45mm.

Head diameter: 30

L. x W.: 420 x 82 mm.

References :

	L [MM]	[KG]
U.7-3T	420	2400