


## FLYWHEEL STAY



### Description :

- To lock the flywheel crown gear.

### References :

	H [MM]	WIDTH L [MM]	L [MM]	FOR	[G]
D.86	25	46	30	245.J1 - 245.J2	21