

SLIDE-HAMMER VALVE LIFTER



Description :

- For removing valve springs.
- The slide hammer is used to free split collets.
- Diameter: 34 mm.

References :

	H [MM]	WIDTH L [MM]	L [MM]	[KG]
U.43LA	36	390	200	1.4