

INJECTOR GASKETS SLIDE HAMMER



Description :

- To pull injector gaskets blocked at the bottom of the injector well.
- Avoids cylinder head removal.

References :

	[KG]
DCR.SR	1.63